


1 Substructure

The substructure must be frost-stable and level.

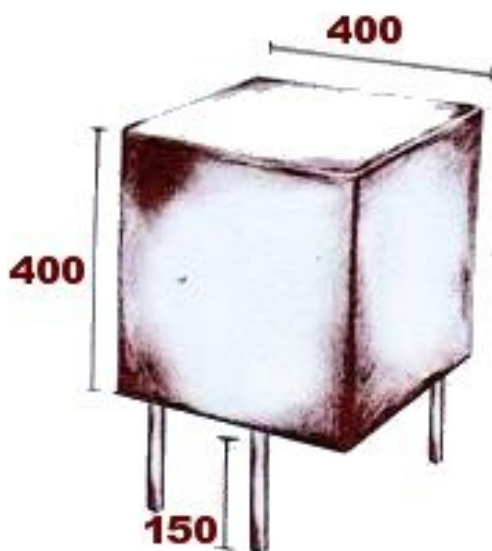

2 Installation

Install EUROFLEX® cube by inserting optional steel mounting anchor into a prepared fresh concrete bed (grade C12/15) located over a stable-bearing substructure.

⚠ To avoid colour variations due to differences in sunlight exposure, leave the UV protection film on the products as supplied until just prior to installation.

All information without guarantee, subject to change. The installation instruction is not subject to any change service. Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex/


Installation Instruction

Ball

1 :: Substructure

The substructure must be frost-sable and level.

Steel baseplate for indoor installation on request.

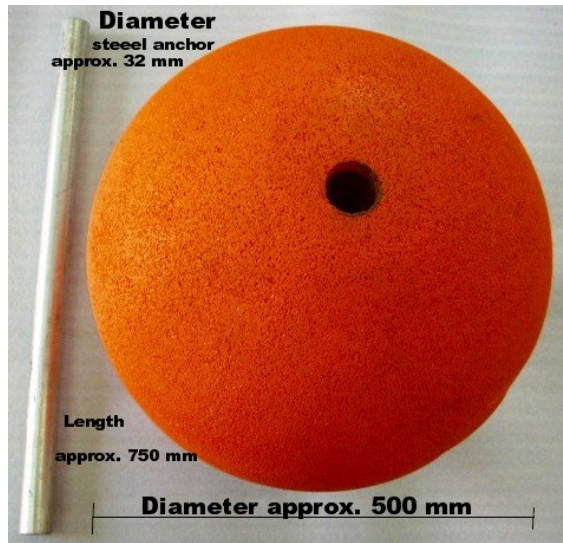

2 :: Installation

Install EUROFLEX® ball by optional steel mounting anchor into a prepared fresh concrete bed (grade C12/15) located over a stable-bearing substructure.

⚠ To avoid colour variations due to differences in sunlight expose, leave the UV protection film on the products as supplied until just prior to installation.